

# 433 MHz Receiver & Transmitter Installation Instructions



The power of control. Automated.

## System

The Larco ultra-small receiver and transmitters operate at 433.92 MHz (acceptable in the United States, Canada, the United Kingdom and any European Union member state) and employ code-hopping technology to reduce false activations. The receiver only operates after learning a transmitter's signal through the simple procedure outlined on the next page. This programming procedure eliminates the need to set dip switches and involves a simple press of the programming button located on the top cover of the receiver (see [Diagram 1](#)).

**NOTE:** Read this document in its entirety before installing any Larco transmitter or receiver. It is important to complete the programming procedure before installing the receiver in its final location. The installer must have access to the receiver's programming button and must be able to view the receiver's LED (Light Emitting Diode) during the programming process.

## Installation

Complete the programming procedure before placing the receiver in final location.

- 1 Mount the receiver in a location so that the antenna is not surrounded by metal. Metal attenuates RF signals causing a reduction in range and inconsistency of signal reception. Door operator motors and controls may also cause radio frequency interference.

Locate the receiver away from the door control's motor and power supply. If the receiver is mounted in a metal enclosure, drill a hole in the enclosure and thread as much of the antenna as possible through the hole. This reduces the effects the metal enclosure will have on the receiver's reception.

- 2 The receiver comes equipped with a wiring harness for easy installation. Reference the wiring diagram (see [Diagram 2](#)) for proper connections.

The receiver and transmitter comply with FCC part 15/15.231, Industry Canada RSS-210, EN55022A, EN55024, EN300-220-3, and EN301-489-1. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product may be susceptible to local transmissions being generated near the transmitter's fundamental frequency. Testing has shown some susceptibility in a frequency range of 416-440 MHz.

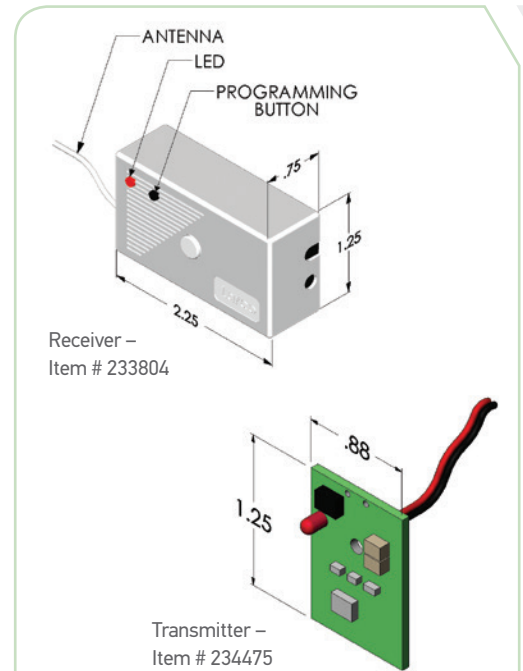


Diagram 1: Receiver and Transmitter Dimensions

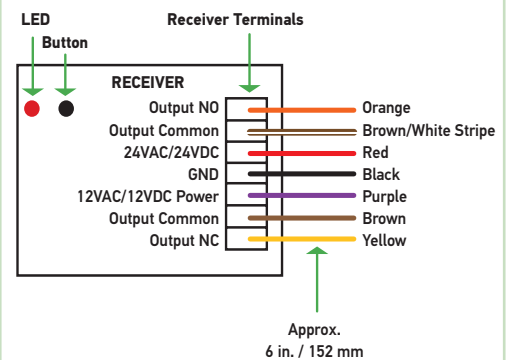


Diagram 2: Receiver Wiring Harness

- Orange:** Relay Output – Normally Open
- Brown with White Stripe:** Relay Output – Common
- Red:** 24VAC/24VDC Power
- Black:** Ground
- Purple :** 12VAC/12VDC Power
- Brown:** Relay Output – Common
- Yellow:** Relay Output – Normally Closed

# 433 MHz Receiver & Transmitter



The power of control. Automated.

## Installation Instructions (cont.)

### Programming Procedures

Prior to programming, make sure the receiver's LED flashes red when power is applied. If the receiver's LED is not flashing red, disconnect then reconnect the power.

#### 1 Program the transmitter into the receiver's memory.

The receiver can learn up to 112 transmitters. Follow the steps below to program the receiver. Repeat steps A-C for each transmitter.

- Press and release the receiver's programming button. The LED should change from flashing red to solid green. This indicates the receiver has entered its programming mode.
- Activate and release the transmitter once and confirm that the receiver's LED changes to solid red. This indicates the receiver is learning the transmitter's code.
- Wait a few seconds and then activate the transmitter a second time. The receiver's LED should now flash green several times. This indicates the end of the learning procedure. When the procedure has ended, the LED should be flashing red.

#### 2 Program the receiver's output activation time.

When the receiver is activated, its outputs will stay in the minimum activation state for approximately 1.5 seconds (default). This time can be adjusted to stay in the activation state for up to 4 hours. Follow the steps below to adjust the receiver's output activation time.

- Press and hold the receiver's programming button for 6 seconds and release. The LED should be solid red. This indicates the receiver is in the activation time programming mode.
- Activate and release the transmitter.
- When the desired time has elapsed (up to 4 hours) activate the transmitter again. The receiver's LED should flash green several times. This indicates the end of the procedure. When the procedure has ended, the LED should be flashing red.

### TECHNICAL SPECIFICATIONS

#### RECEIVER – ITEM # 233804

Frequency	433.92 MHz
Dimensions	2.25" x 1.25" x 0.75"
Security Code Method	Code Hopping - Can Learn up to 112 Different Transmitters
Operating Temperature Range	-4 °F to 122 °F (-20 °C to 55 °C)
Electrical Rating	100,000 Cycles @ 2 Amps at Either 24 VDC or 120 VAC
Input Power	24 VAC/VDC or 12 VAC/DC
Output	Two Relay Outputs: 1 NO 1 NC
Certifications	FCC, Industry Canada, CE, UKCA

#### TRANSMITTER – ITEM # 234475

Frequency	433.92 MHz
Dimensions	1.25" x 0.875" x 0.25"
Security Code Method	Code Hopping
Battery Life	60,000 Cycles
Certifications	FCC, Industry Canada, CE, UKCA
Operating Temperature Range	-4 °F to 122 °F (-20 °C to 55 °C)

### Deleting all Transmitters from the Receiver's Memory

The receiver's memory can be cleared of all previously learned transmitters by following the steps below. NOTE: Deleting previously learned transmitters does not change the receiver's output activation time.

- Press and hold the receiver's programming button for more than 8 seconds, until the receiver's LED starts flashing green. Release the programming button. The LED should now be flashing red.
- The receiver's memory is now cleared. To learn new transmitters, follow the steps for programming transmitters into the receiver's memory.

223-0126-000 Rev. I 8/21



WARNING: Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

ATEK Access Technologies  
10025 Valley View Road, Ste. 190  
Eden Prairie, MN 55344 U.S.A.

PH: 1.800.523.6996  
FAX: 1.800.589.3705  
+1.218.829.9797

[www.atekaccess.com](http://www.atekaccess.com)



Access the power of technology.